


INSTRUCTION MANUAL

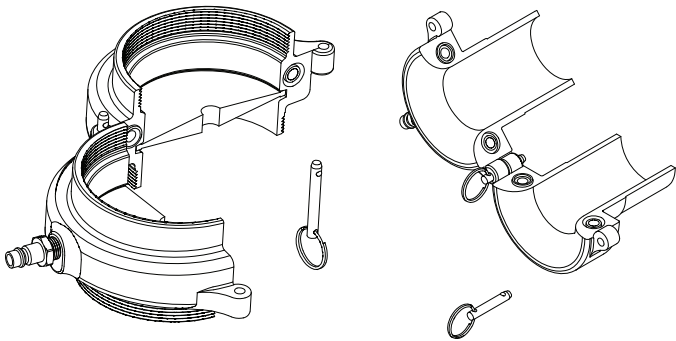

Applicators for UG5 Cable Lubrication System



Description

The Greenlee Applicators for the ULTRA GLIDER™ UG5 Cable Lubrication System are intended to apply cable lubricant evenly around the diameter of the cable that is being installed.

Safety

Safety is essential in the use and maintenance of Greenlee tools and equipment. This instruction manual and any markings on the tool provide information for avoiding hazards and unsafe practices related to the use of this tool. Observe all of the safety information provided.

Purpose of this Manual

This manual is intended to familiarize all personnel with the safe operation and maintenance procedures for the Greenlee Applicators for the ULTRA GLIDER™ UG5 Cable Lubrication System,

Keep this manual available to all personnel.

Replacement manuals are available upon request at no charge at www.greenlee.com.

IMPORTANT SAFETY INFORMATION

	⚠ WARNING
	Read and understand all of the instructions and safety information in this manual and the manual accompanying the UG5 Cable Lubrication System before operating or servicing this tool. Failure to observe this warning will result in severe injury or death.

	⚠ WARNING
	Wear eye protection when operating this tool. Failure to wear eye protection could result in serious eye injury from flying debris.

	⚠ CAUTION
	Cable lubricant is slippery. Do not stand or walk in spilled lubricant. Wear nonskid safety shoes. Failure to observe this precaution may result in injury.

⚠ CAUTION
<ul style="list-style-type: none">• Use only new lube or lube free of contaminants. DO NOT USE LUBE WITH BEADS OR SIMILAR MATERIALS!• Do not allow suction pipe to contact ground or other dirty surfaces. Allowing foreign material such as beads, dirt, stones, gravel, metal parts, wire stripping, etc. to enter the suction pipe may damage the pump, motor, or applicators.

Note: Keep all decals clean and legible, and replace when necessary.


Selecting and Attaching Applicators

Applicators are available in two styles—threaded and slip-in.

- Threaded applicators can be used on any conduit that has threaded ends. They are available in conduit sizes from 3/4" to 4".
- Slip-in applicators can be used on any conduit where the feed direction is horizontal or downward and where a slight reduction of the conduit fill area is permissible. They are available in conduit sizes from 1-1/2" to 6". Slip-in applicators are stepped to fit both schedule 40 and 80 conduit.


To attach an applicator:

1. Select the appropriate applicator for the application.
2. Remove one of the pins and open the applicator.

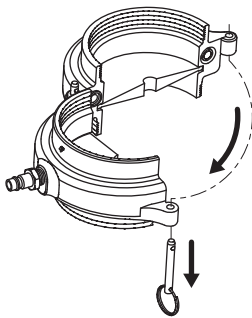


Note: If feeding upward into EMT conduit, fit a threaded EMT adapter (if one is not already fitted) onto the conduit, and attach a threaded applicator to the adapter.

3. **For threaded applicators**, attach the applicator to the threads of the conduit so that the quick connect nipple is accessible. Close the applicator and re-insert the pin. ScREW the conduit bushing onto the male threads of the applicator.

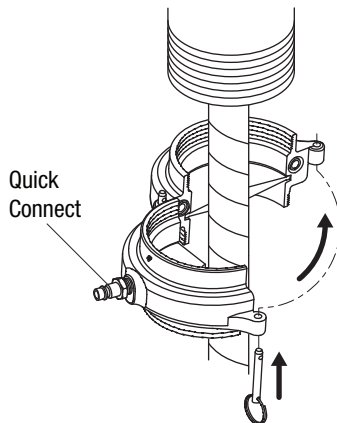

For slip-in applicators, place the applicator around the pull rope. Close the applicator and re-insert the pin. Fully insert the applicator into the conduit.

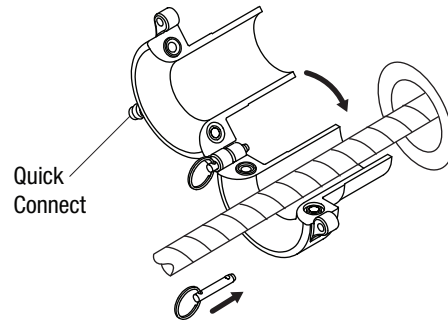

4. Attach the hose to the quick connect nipple on the applicator.

Maintenance

Cleanup

- Wipe out excess lubricant from the applicator.
- Replace the applicator in the carrying case to keep the lubricant from drying out.

Note: If the lubricant is allowed to dry out in the applicator, bathe the item in hot water until the lubricant becomes fluid again.

All specifications are nominal and may change as design improvements occur. Greenlee Textron Inc. shall not be liable for damages resulting from misapplication or misuse of its products.

ULTRA GLIDER is a trademark of Greenlee Textron Inc.

KEEP THIS MANUAL



GREENLEE®
A Textron Company

USA	800-435-0786	Fax: 800-451-2632
	815-397-7070	Fax: 815-397-1865
Canada	800-435-0786	Fax: 800-524-2853
International	+1-815-397-7070	Fax: +1-815-397-9247

4455 Boeing Drive • Rockford, IL 61109-2988 • USA • 815-397-7070
An ISO 9001 Company • Greenlee Textron Inc. is a subsidiary of Textron Inc.

www.greenlee.com

Printed in USA